




### Assembling T90 netting to normally turned netting

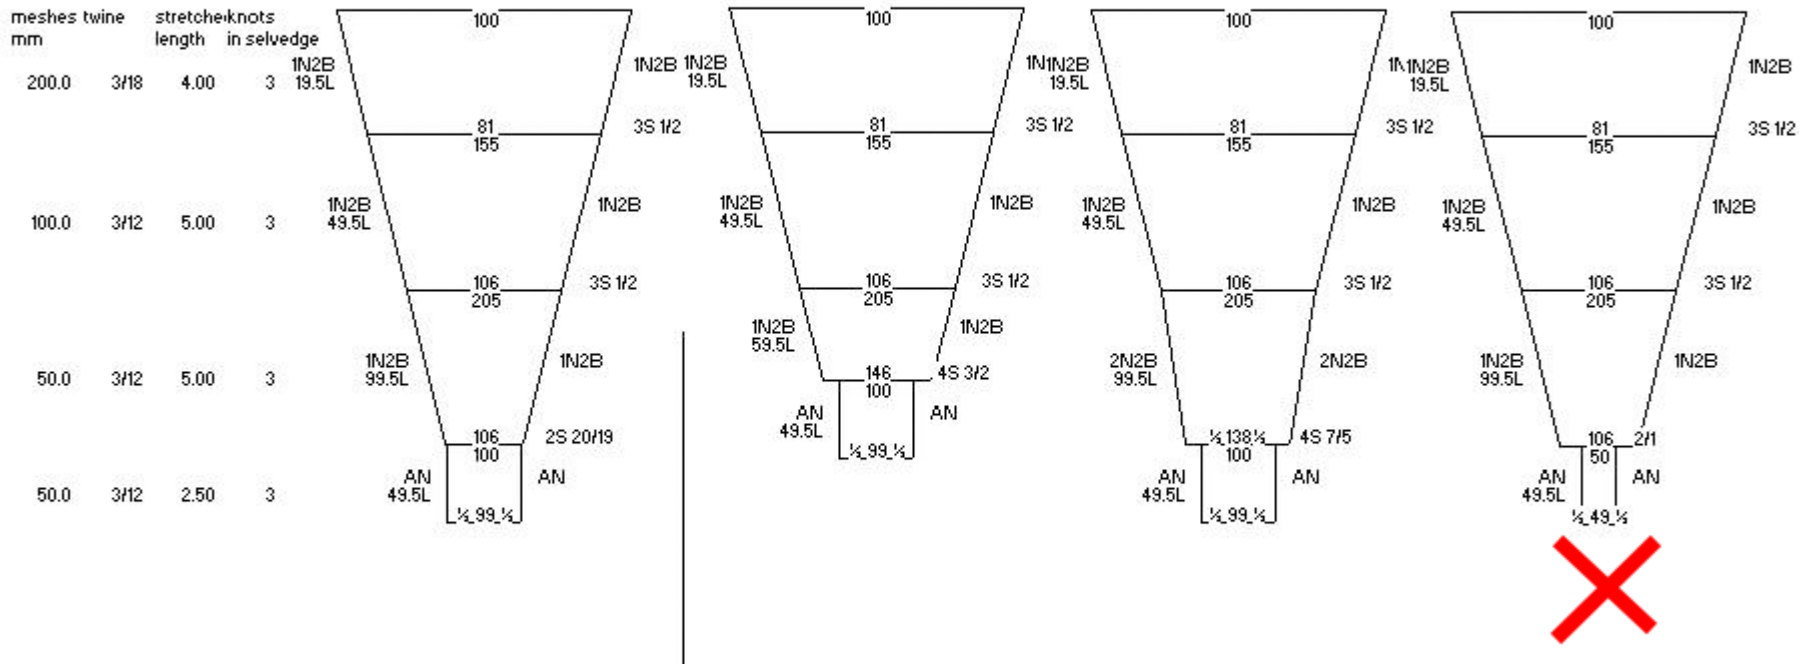

Normal procedure to join a codend to the rear of the belly: joining ratio is 1:1

Different proposals for joining T90 to normally turned net at a ratio of approx 2:3: Shorten the belly, redesign rear section of belly, reduce circumference of codend (not recommended)

